

Product Name: Dynamic RGBWW Spritzer 32"

Product Number: #66552

Assembled Dimensions: 32" x 32" x 32"; 2.2 lbs



PRODUCTS ARE NOT INTENDED FOR COMMERCIAL USE

UPDATED: 2025-10-23

MADE IN CHINA

Page 1 of (4 of pages)

Assemble in location for intended use.
Remove all parts, hardware, and protective packaging from carton and carefully arrange on a clean, level, padded surface.

Qty.	Components
1	Dynamic RGBWW 32" Spritzer
1	RGBWW Remote Control



## **BASIC ASSEMBLY**

- STEP 1: Gently remove your spritzer from the packaging.
- STEP 2: Find the center cluster and start unfolding the arms by bending them outward from the base. Pick one arm to start with and work your way around for best results.
- STEP 3: Bend each arm away from the center, spacing them out evenly in all directions. Aim for a full, 360° starburst shape—or get creative and shape it your way!
- STEP 4: Once all arms are spaced around the center, adjust the angles to add depth and volume. Not all arms should lie flat—some should point slightly up or down.
- STEP 5: Step back and check your spritzer from multiple angles. Make small adjustments to arms as needed to ensure an even, spherical look.
- STEP 6: If you plan to hang or stake the spritzer, ensure it's shaped after mounting for final touch-ups. When hanging your Spritzer, always use the metal loop and avoid suspending it by the cord. Plug into a UL approved outlet or extension cord.

Need help?

Scan the QR code to watch our quick how-to video! →

## REMOTE CONTROL UNIT

- STEP 1: There is a transparent slip on the bottom of the Remote Control.
- STEP 2: Take out the transparent slip to activate the Remote Control.
- STEP 3: To change the battery, slide the cover plate off by pushing the small black area to the right direction. Pull out the old battery and replace it with new AAA, identical batteries.
- STEP 4: Remove the battery after the holiday season to avoid damage of the remote control unit. Install a new battery into the remote control unit at the beginning of the next holiday season.







## **REMOTE CONTROL OPERATION**



STEP 1: Remove the Remote Control from it's packaging.

STEP 2: Use the Remote Control to reset the RGBWW light:

- Press the "OFF" button once.
- Press the "ON" button once.
- Press the "Steady" button once.

STEP 3: Now the Remote Control is cleared and ready to accept new options.

Button	Description	Button	Description	Button	Description
ON	On	***	Theme: Candy Cane 1. Chase Red-White-Green 2. Each color 3 sec. 3. Red base, white flash 4. Green base, white flash 5. Purple base, white flash	OFF	Off
	Theme: Christmas 1. Steady Red 2. Steady Green 3. Chase Red-Green 4. Wave Red-Green 5. Each color 3 seconds		Theme: Halloween 1. Steady Purple 2. Steady Yellow 3. Chase Purple-Yellow 4. Chase Purple only 5. Each color 3 seconds		Theme: Glacier 1. Steady Blue 2. Steady Teal 3. Chase Blue-White 4. Blue base, white flash 5. Each color 3 seconds
STEADY	Steady On	WAVE	Wave Function	FLASH OUT	Flashing Out Function
FLASH	Flashing Warm White	CHASE	Chasing Function	FLASH OPAL	Flashing Opal Function
RED	Red Color	GREEN	Green Color	BLUE	Blue Color
HARVEST	Harvest Color	BERRY	Berry Color	AQUA	Aqua Color
OPAL	Opal Color	WARM	Warm White Color	MULTI	Multi Color

## **CARE & USE**

- 1. Product is intended for indoor and outdoor use.
- 2. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources.
- 3. Do not use product outdoors in case of extreme weather conditions.
- 4. Do not use this product for any other purpose than its intended use.
- 5. Do not secure wiring of the product with sharp hooks or nails.
- 6. Not intended for permanent installation.

At the end of the season clean it, if necessary, with a dry cloth. Place it in its original packaging and store it in a cool, dry place.

Please contact our team for assembly assistance or questions at 1-855-505-6046 or email sales@Holidynamics.com. We are available weekdays 8:00am to 5:00pm CST.