



Product Name: Happy Birthday with balloon

Product Number: #66704

Assembled Dimensions: 25" x 26"



**Prevent accidentally discarding small parts of hardware. Retain all carton contents until assembly and installation are complete.**

PRODUCTS ARE NOT INTENDED  
FOR COMMERCIAL USE

MADE IN CHINA

UPDATED: 2025-12-16

Page 1 of (5 of pages)

▲ Assemble in location for intended use.

Remove all parts, hardware, and protective packaging from carton and carefully arrange on a clean, level, padded surface.

Qty.	Components
1	<p data-bbox="646 380 1081 415"><b>Happy Birthday with balloon</b></p> 

## BASIC ASSEMBLY


STEP 1: Carefully remove the metal frame from the packaging. Take care not to bend or damage the frame during removal.

STEP 2: Gently unfold the metal frame according to the diagram below. Fully extend all sections until the frame is in its intended shape.


STEP 3: Mount the frame securely using the provided hardware and washers. Ensure the product is safely mounted before powering on.

STEP 4: Plug the product into a UL-listed outlet suitable for the installation location.


66704

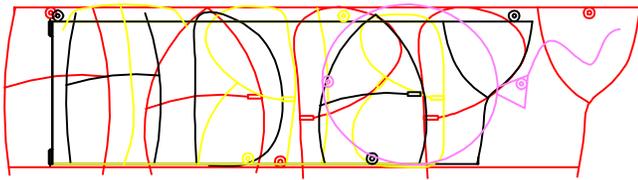

①

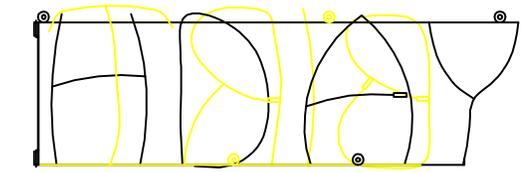

②

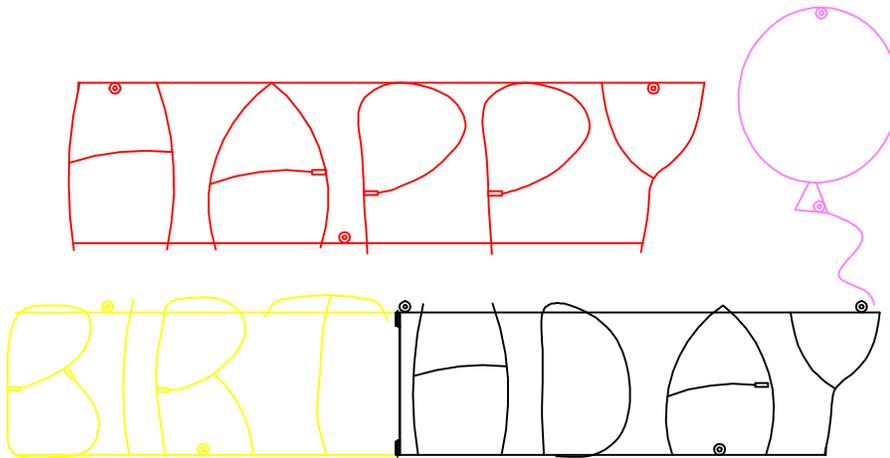

## REMOTE CONTROL UNIT

STEP 1: There is a transparent slip on the bottom of the Remote Control.

STEP 2: Take out the transparent slip to activate the Remote Control.

STEP 3: To change the battery, slide the cover plate off by pushing the small black area to the right direction. Pull out the old battery and replace it with a new CR2025, identical battery.

STEP 4: Remove the battery after the holiday season to avoid damage of the remote control unit. Install a new battery into the remote control unit at the beginning of the next holiday season.



## CARE & USE

1. Product is intended for indoor and outdoor use.
2. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources.
3. Do not use product outdoors in case of extreme weather conditions.
4. Do not use this product for any other purpose than its intended use.
5. Do not secure wiring of the product with sharp hooks or nails.
6. Not intended for permanent installation.

***At the end of the season clean it, if necessary, with a dry cloth.  
Place it in its original packaging and store it in a cool, dry place.***

Please contact our team for assembly assistance or questions at 1-855-505-6046 or email [sales@Holidynamics.com](mailto:sales@Holidynamics.com). We are available weekdays 8:00am to 5:00pm CST.

## REMOTE CONTROL OPERATION

STEP 1: Remove the Remote Control from it's packaging.

STEP 2: Use the Remote Control to reset the RGBWW light:

- Press the "OFF" button once.
- Press the "ON" button once.
- Press the "Steady" button once.

STEP 3: Now the Remote Control is cleared and ready to accept new options.

To chose a single function and color, press one of the gray function buttons in button rows 3 and 4 (Zone 2), then press one of the color buttons in button rows 5, 6, or 7.

Button	Description	Button	Description	Button	Description	Button	Description
	Raise Brightness		Lower Brightness		Switch Light OFF		Switch Light ON
	Patriotic scene		Halloween scene		Thanksgiving scene		Christmas scene
	White Color		Static Dynamic 4 Speeds		Mix Dynamic 4 Speeds		RGB Dynamic Auto Mode
	Static Color Change		RGB Dynamic Back Move		RGB Dynamic Front Move		Flash Mode
	Static Color 3 Colors		RGB Mix Dynamic Back Move		RGB Mix Dynamic Front Move		Bright Change Color
	Static Color 7 Colors		RGB Mix Dynamic Back Move		RGB Mix Dynamic Front Move		Single Color Water Drop Dynamic
	Static Color 10 Colors		Time Set Up 4 Hours OFF		Time Set Up 8 Hours OFF		Auto Program